

e-Actuator Setup Tool Change History

*Please always use the latest version of e-Actuator Setup Tool setting software.

Installer Ver1.2.0 (Soft Ver. 1.20)	• Fixed wrong setting of output width of OUT0/1/2
Installer Ver1.1.1 (Soft Ver. 1.10)	• Correction of the description of the“Torque when held” parameter.
Installer Ver1.1.0 (Soft Ver. 1.10)	First edition