


Instruction Manual

ISO Standard Solenoid Valve

Series EVS1-M0

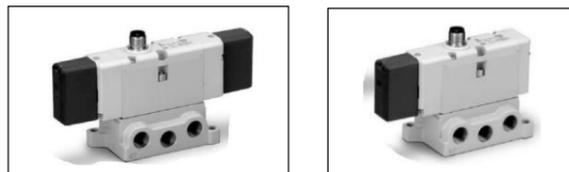

The intended use of this product is to control the movement of an actuator.

1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC^{*)}, and other safety regulations.

^{*)} ISO 4414: Pneumatic fluid power - General rules relating to systems.
ISO 4413: Hydraulic fluid power - General rules relating to systems.
IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

- Refer to product catalogue, Operation Manual and Handling Precautions for SMC Products for additional information.
- Keep this manual in a safe place for future reference.

	Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
	Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
	Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Warning

- Always ensure compliance with relevant safety laws and standards.
- All work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.

Caution

- The product is provided for use in manufacturing industries only. Do not use in residential premises.

2 Specifications

2.1 Valve specifications

Valve type	Metal seal	Rubber seal		
Fluid	Air			
Maximum operating pressure [MPa]	1			
Minimum operating pressure [MPa]	Single	0.1	0.15	
	Double	0.1	0.1	
	3-position	0.15	0.2	
Ambient and fluid temperature [°C] ^{Note 1)}	-10 to 60	-5 to 60		
Flow characteristics	Refer to catalogue			
Response time [ms]	EVS1-02	Single	≤20	≤25
		Double	≤13	≤15
		3-position	≤36	≤40
	EVS1-01	Single	≤45	≤50
		Double	≤15	≤20
		3-position	≤70	≤80
Duty cycle	Contact SMC			
Minimum operating frequency	1 cycle / 30 days			
Maximum operating frequency	Contact SMC			
Lubrication	Not required (Non-lube type)			

2 Specifications - continued

Manual override	Push type (tool required)		
Impact / vibration resistance [m/s ²] ^{Note 2)}	150 / 30		
Enclosure (based on IEC60529)	IP65		
Mounting orientation	Single	Unrestricted	
	Double, 3-position	Horizontal	
Weight [g] ^{Note 3)}	EVS1-02	Single	140
		Double	170
		3-position	180
	EVS1-01	Single	190
		Double	230
		3-position	260

Table 1.

Note 1) Use dry air to prevent condensation at low temperatures.

Note 2) Impact resistance: No malfunction resulted during an impact test using a drop impact tester. The test was performed one time each in the axial and right-angle directions of the main valve and armature for both energized and deenergized conditions. (Values quoted are for a new valve).

Vibration resistance: No malfunction resulted during a one sweep test between 8.3 and 2000Hz. The test was performed in the axial and right-angle directions of the main valve and armature for both energized and deenergized conditions. (Values quoted are for a new valve).

Note 3) Weight of subplate:

VS1-01-A01/02: 140 g
VS1-01-A01/02: 70 g

2.2 Solenoid specification

Rated coil voltage [VDC]	12, 24	
Electrical entry	M8, M12	
Allowable voltage fluctuation ^{Note 1)}	±10 % of rated voltage	
Coil insulation	Class B equivalent	
Power consumption (current) [W]	24 VDC	1 (42 mA)
	12 VDC	1 (83 mA)
Surge voltage suppressor	ZNR (Varistor)	
Indicator light	LED	

Table 2.

Note 1) Valve state is not defined if electrical input is outside of specified operating ranges.

2.3 Pneumatic symbol

Refer to catalogue for pneumatic symbols.

2.4 Indicator light



Figure 1.

2.5 Special products

Warning

Special products (-X) might have specifications different from those shown in this section. Contact SMC for specific drawings.

3 Installation

3.1 Installation

Warning

- Do not install the product unless the safety instructions have been read and understood.

3.2 Environment

Warning

- Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not install in a location subject to vibration or impact in excess of the product's specifications.
- Do not mount in a location exposed to radiant heat that would result in temperatures in excess of the product's specifications.
- Products compliant with IP65 enclosures are protected against dust and water, however, these products cannot be used in water.
- Products compliant with IP65 enclosures satisfy the specifications by mounting each product properly. Be sure to read the Specific Product Precautions for each product.

3 Installation - continued

- Do not use in high humidity environment where condensation can occur.
- Contact SMC for altitude limitations.

3.3 Piping

Caution

- Before connecting piping make sure to clean up chips, cutting oil, dust etc.
- When installing piping or fittings, ensure sealant material does not enter inside the port. When using seal tape, leave 1 thread exposed on the end of the pipe/fitting.
- Tighten fittings to the specified tightening torque.

Connection threads (Rc, G, NPTF)	Proper tightening torque [N·m]
M5	1 to 1.5
1/8	3 to 5
1/4	8 to 12

Table 3.

3.4 Lubrication

Caution

- SMC products have been lubricated for life at manufacture, and do not require lubrication in service.
- If a lubricant is used in the system, refer to catalogue for details.

3.5 Air supply

Warning

- Use clean air. If the compressed air supply includes chemicals, synthetic materials (including organic solvents), salinity, corrosive gas etc., it can lead to damage or malfunction.

Caution

- Install an air filter upstream of the valve. Select an air filter with a filtration size of 5 µm or smaller.

3.6 Manual override

Warning

- Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Since connected equipment will

operate when the manual override is activated, confirm that conditions are safe prior to activation.

- Locked manual overrides might prevent the valve responding to being electrically de-energised or cause unexpected movement in the equipment.

3.7 Mounting

Caution

- Ensure gaskets are in good condition, not deformed and are dust and debris free.
- When mounting valves ensure gaskets are present, aligned and securely in place and tighten screws to the recommended tightening torques shown below.
- Tighten screws to the appropriate tightening torque as per below.

Series size	Thread	Recommended tightening torque [N·m]
EVS1-01	M4	1 to 1.8
EVS1-02	M3	0.8 to 1

Table 4.

3.8 Electrical circuits

Caution

Surge suppression should be specified by using the appropriate part number. If a valve type without suppression (Type 'Nil') is used, suppression must be provided by the host controller as close as possible to the valve.

3.8.1 Single solenoid

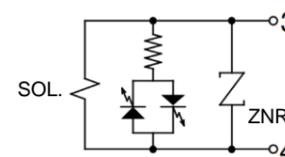


Figure 2.

3 Installation - continued

3.8.2 Double solenoid

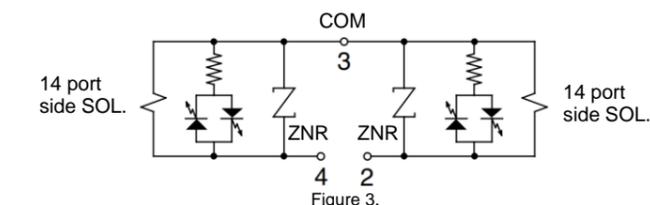


Figure 3.

3.9 Wiring specification

M8 connector (EVS1-02)	M12 connector (EVS1-01)
Pin no. 1: Open 2: 12 port side SOL(+) 3: COM(-) 4: 14 port side SOL(+) 	Pin no. 1: Open 2: 12 port side SOL(+) 3: COM(-) 4: 14 port side SOL(+) 5: Ground

Table 5.

3.10 Residual voltage

Caution

- If a varistor voltage suppressor is used, the suppressor arrests the back EMF voltage from the coil to a level in proportion to the rated voltage.
- Ensure the transient voltage is within the specification of the host controller.
- Contact SMC for the varistor residual voltage.
- Valve response time is dependent on surge suppression method selected.

3.11 Countermeasure for surge voltage

Caution

- At times of sudden interruption of the power supply, the energy stored in a large inductive device may cause non-polar type valves in a de-energised state to switch.
- When installing a breaker circuit to isolate the power, consider a valve with polarity (with polarity protection diode), or install a surge

absorption diode across the output of the breaker.

3.12 Extended period of continuous energization

Caution

If a valve will be continuously energized for an extended period of time, the temperature of the valve will increase due to the heat generated by the coil assembly. This will likely adversely affect the performance of the valve and any nearby peripheral equipment. Therefore, if the valve is to be energized for periods of longer than 30 minutes at a time or if during the hours of operation the energized period per day is longer than the de-energized period, we advise using a valve with specification of 0.4 W or lower valve, such as the SY series, or a valve with a power-saving circuit.

3.13 Effect of back pressure when using a manifold

Warning

- Use caution when valves are used on a manifold, because an actuator may malfunction due to back-pressure.
- Special caution must be taken when using 3 position exhaust centre valve or when driving a single acting cylinder. To prevent a malfunction, implement counter measures such as using a single EXH spacer assembly or an individual exhaust manifold.

4 How to Order

Refer to catalogue for 'How to Order' or to product drawing for special products.

5 Outline Dimensions

Refer to catalogue for outline dimensions.

6 Maintenance

6.1 General maintenance

Caution

- Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- If handled improperly, compressed air can be dangerous.

6 Maintenance - continued

- Maintenance of pneumatic systems should be performed only by qualified personnel.
- Before performing maintenance, turn off the power supply and be sure to cut off the supply pressure. Confirm that the air is released to atmosphere.
- For 3 position closed centre valves exhaust the residual pressure between the valve and the cylinder.
- After installation and maintenance, apply operating pressure and power to the equipment and perform appropriate functional and leakage tests to make sure the equipment is installed correctly.
- If any electrical connections are disturbed during maintenance, ensure they are reconnected correctly and safety checks are carried out as required to ensure continued compliance with applicable national regulations.
- Do not make any modification to the product.
- Do not disassemble the product, unless required by installation or maintenance instructions.

7 Limitations of Use

Warning

The system designer should determine the effect of the possible failure modes of the product on the system.

7.1 Limited warranty and disclaimer/compliance requirements

Refer to Handling Precautions for SMC Products.

Warning

7.2 Intermediate stopping

Refer to Handling Precautions for 3/4/5 port Solenoid Valves.

7.3 Holding of pressure (including vacuum)

Since valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum) in a system.

7.4 Cannot be used as an emergency shut-off valve

This product is not designed for safety applications such as an emergency shut-off valve. If the valves are used in this type of system, other reliable safety assurance measures should be adopted.

7.5 Safety relays or PLC

If a safe output from a safety relay or PLC is used to operate this valve, ensure that any output test pulse duration is shorter than 1 ms to avoid the valve solenoid responding.

7.6 Air returned or air/spring returned spool valves

- The use of 2-position single valves with air returned or air/spring returned spools has to be carefully considered.
- The return of the valve spool into the de-energized position depends on the pilot pressure. If the pilot pressure drops below the specified operating pressure the position of the spool cannot be defined.
- The design of the system must take into account such behaviour.
- Additional measures might be necessary. For example, the installation of an additional air tank to maintain the pilot pressure.

Energy source status	Single	Double	3 position
Air supply present, electricity cut	Spool returns to the OFF position by air force and spring force	Spool stops moving after electricity cut (Position cannot be defined)	Spool returns to the OFF position by spring force
Air supply cut before electricity cut	Spool returns to the OFF position by spring force	Spool stops moving after air pressure cut (Position cannot be defined)	Spool returns to the OFF position by spring force

Table 6.

Caution

7.7 Leakage voltage

Ensure that any leakage voltage caused by the leakage current when the switching element is OFF causes $\leq 2\%$ of the rated voltage across the valve.

7.8 Low temperature operation

Unless otherwise indicated in the specifications for each valve, operation is possible to -10°C for metal seal and -5°C for rubber seal, but appropriate measures should be taken to avoid solidification or freezing of drainage and moisture, etc.

7 Limitations of Use - continued

7.9 Momentary energization

If a double solenoid valve is operated with momentary energization, it should be energized for at least 0.1 second. However, depending on the secondary load conditions, it should be energized until the cylinder reaches the stroke end position, as there is a possibility of malfunction otherwise.

8 Product Disposal

This product shall not be disposed of as municipal waste. Check your local regulations and guidelines to dispose this product correctly, in order to reduce the impact on human health and the environment.

9 Contacts

Refer to www.smcworld.com or www.smc.eu for your local distributor/importer.

SMC Corporation

URL : <https://www.smcworld.com> (Global) <https://www.smc.eu> (Europe)
 SMC Corporation, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, Japan
 Specifications are subject to change without prior notice from the manufacturer.
 © 2021 SMC Corporation All Rights Reserved.
 Template DKP50047-F-085M