



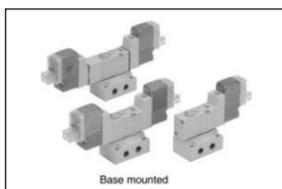

ORIGINAL INSTRUCTIONS

Instruction Manual
4/5 port solenoid valve
SYJ3000/5000/7000

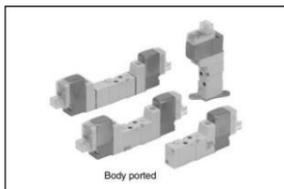

The intended use of this product is to control the movement of an actuator.

1 Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC) (1), and other safety regulations.

- 1) ISO 4414: Pneumatic fluid power - General rules relating to systems.
- ISO 4413: Hydraulic fluid power - General rules relating to systems.
- IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
- ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.

- Refer to product catalogue, Operation Manual and Handling Precautions for SMC Products for additional information.
- Keep this manual in a safe place for future reference.

Caution	Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
Warning	Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
Danger	Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Warning

- Always ensure compliance with relevant safety laws and standards.
- All work must be carried out in a safe manner by a qualified person in compliance with applicable national regulations.
- If this equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Caution

- The product is provided for use in manufacturing industries only. Do not use in residential premises.

2 Specifications

2.1 Valve specifications

Model	SYJ3000	SYJ5000	SYJ7000
Fluid	Air		
Operating Pressure [MPa]	2 position single	0.15 to 0.7	
	2 position double	0.1 to 0.7	
	3 position	0.2 to 0.7	0.15 to 0.7
Ambient and fluid temperature [°C]	-10 to 50 (no freezing)		
Flow characteristics	Refer to catalogue		
Response time [ms] ^{Note 1)}			
Maximum operating frequency [Hz]	2 position	10	5
	3 position	3	3
Minimum operating frequency [Hz]	1 cycle/30 days		
Manual override	Non-locking push type, push-turn locking slotted type, push-turn locking lever type		

2 Specifications - continued

Pilot exhaust method	Individual exhaust for pilot valve, common exhaust for pilot and main valve
Lubrication	Not required
Mounting orientation	Unrestricted
Impact/vibration resistance [m/s ²] ^{Note 2)}	150/30
Enclosure (based on IEC60529)	IP40 (M8 connector conforms to IP65)
Duty cycle	Contact SMC
Weight	Refer to catalogue

Table 1.

- Note 1) At 0.5 MPa. Based on dynamic performance test, JIS B 8419: 2010. (Coil temperature: 20°C, at rated voltage, without surge voltage suppressor)
- Note 2) Impact resistance: No malfunction resulted from the impact test using a drop impact tester. Test was performed one time each in the axial and right-angle directions of the main valve and armature for both energized and de-energized states. (Values quoted are for a new valve)
- Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed in the axial and right-angle directions of the main valve and armature for both energized and de-energized states. (Values quoted are for a new valve)

2.2 Solenoid specifications

Model	SYJ3000	SYJ5000 / SYJ7000		
Electrical entry	Grommet (G,H), L/M plug connector (L, M), M8 connector (W)	Grommet (G,H), L/M plug connector (L,M), M8 connector (W), DIN connector (D,Y)		
	G, H, L, M, W	G, H, L, M, W	D, Y	
Coil rated voltage [V]	DC	24, 12, 6, 5, 3	24, 12, 6, 5, 3	24, 12
	AC (50/60 Hz)	100, 110, 200, 220		
Allowable voltage fluctuation ^{Note 1, 2)}	±10% of rated voltage			
Coil insulation class	Class B			
Power consumption [W]	DC	Standard	0.35 (with light: 0.4)	0.35 (with light: 0.4(DIN terminal with light:0.45))
		With power saving circuit	0.1 (with light only) (Starting 0.4, holding 0.1)	

Apparent power [VA] ^{Note 3)}	AC	100V	0.78 (with light: 0.81)	0.78 (with light: 0.87)
		110V (115V)	0.86 (with light: 0.89) (0.94 (with light: 0.97))	0.86 (with light: 0.97) (0.94 (with light: 1.07))
		200V	1.18 (with light: 1.22)	1.15 (with light: 1.30)
		220V (230V)	1.30 (with light: 1.34) (1.42 (with light: 1.46))	1.27 (with light: 1.46) (1.39 (with light: 1.60))
Surge voltage suppressor	Diode (Non-polarity type: Varistor)			
Indicator light	LED (Neon light for AC DIN Terminal)			

Table 2.

- Note 1) Valve state is not defined if electrical input is outside the specified operating range.
- Note 2) For 115 VAC and 230 VAC, the allowable voltage is -15% to +5% of rated voltage.
- Note 3) Common solenoid between 110 VAC and 115 VAC, and between 220 VAC and 230 VAC.

2.3 Manifold specification

Refer to catalogue for additional details such as flow characteristics, A and B porting specifications and port sizes.

2.3.1 Standard manifold

Valve series	SYJ3000	SYJ5000	SYJ7000
Model	Type 20, 31, S31, 32, S32, 41, S41, 46, S46	Type 20, 40, 41, 42, 43	Type 20, 21, 40, 41, 42
Manifold Type	Single base / base mounted		
P (SUP), R (EXH)	Common SUP./ EXH. (Type 46, S46: Common SUP, Individual EXH)		
Valve Stations	2 to 20	2 to 20 (Type 20: 2 to 15)	

Table 3.

2 Specifications - continued

2.3.2 Flat ribbon cable manifold

Valve series	SYJ3000	SYJ5000	SYJ7000
Model	Type 21P, 32P	Type 20P, 41P, 43P	Type 21P
Manifold Type	Single base / base mounted		
P (SUP), R (EXH)	Common SUP./ EXH.		
Valve Stations	4 to 12	3 to 12	
Applicable flat ribbon cable connector	Socket: 26 pins MIL type with strain relief (MIL-C-83503)		
Internal wiring	In common between +COM and -COM (Z type: +COM only)		
Rated voltage[V] ^{Note 2)}	DC	24, 12	
	AC	100, 110	

Table 4.

- Note 1) The withstand voltage specification for the wiring unit section conforms to JIS C 0704, Grade 1 or its equivalent.
- Note 2) CE-Compliant: For DC only.

2.3.3 EX510 serial wiring manifold

Valve series	SYJ3000	SYJ5000	SYJ7000
Model	Type 21SA, 32SA	Type 20SA, 41SA, 42SA, 43SA	Type 21SA, 41SA
Manifold Type	Single base / base mounted		
P (SUP), R (EXH)	Common SUP./ EXH.		
Valve Stations	4 to 16	3 to 16	
Rated voltage [VDC]	24		

Table 5.

2.4 Special products

Warning

Special products (-X) might have specifications different from those shown in this section. Contact SMC for specific drawings.

2.5 Pneumatic symbols

Refer to catalogue for pneumatic symbols.

3 Installation

3.1 Installation

Warning

- Do not install the product unless the safety instructions have been read and understood.

3.2 Environment

Warning

- Do not use in an environment where corrosive gases, chemicals, salt water or steam are present.
- Do not use in an explosive atmosphere.
- Do not expose to direct sunlight. Use a suitable protective cover.
- Do not install in a location subject to vibration or impact in excess of the product's specifications.
- Do not mount in a location exposed to radiant heat that would result in temperatures in excess of the product's specifications.
- Products compliant with IP65 and IP67 enclosures are protected against dust and water, however, these products cannot be used in water.
- Products compliant with IP65 and IP67 enclosures satisfy the specifications by mounting each product properly. Be sure to read the Specific Product Precautions for each product.
- Do not use in high humidity environment where condensation can occur.
- Contact SMC for altitude limitations

3.3 Piping

Caution

- Before connecting piping make sure to clean up chips, cutting oil, dust etc.
- When installing piping or fittings, ensure sealant material does not enter inside the port. When using seal tape, leave 1 thread exposed on the end of the pipe/fitting.

3 Installation - continued

- Tighten fittings to the specified tightening torque.

Connection thread size [R, NPT]	Tightening torque [N·m]
M3	0.4 to 0.5
M5	1 to 1.5
1/8	3 to 5
1/4	8 to 12

Table 6.

3.4 One-touch fittings

3.4.1 Tube attachment and detachment

Caution

Refer to the specific precautions in the catalogue.

3.4.2 Precautions on other tube brands

Caution

When using non-SMC brand tubes, refer to the specific precautions in the catalogue.

3.5 Lubrication

Caution

- SMC products have been lubricated for life at manufacture, and do not require lubrication in service.
- If a lubricant is used in the system, refer to catalogue for details.

3.6 Manual override

Warning

- Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Since connected equipment will operate when the manual override is activated, confirm that conditions are safe prior to activation.
- Locked manual overrides might prevent the valve responding to being electrically de-energised or cause unexpected movement in the equipment.
- Refer to the catalogue for details of manual override operation. When operating the locking type manual override with a screwdriver, turn it gently using a watchmaker screwdriver. [Torque less than 0.1 N·m].

3.7 Mounting

Caution

- Use caution to the assembly orientation for solenoid valves, gasket, and optional parts.
- Ensure gaskets are in good condition, not deformed and are dust and debris free.
- When mounting valves ensure gaskets are present, aligned and securely in place and tighten screws to a torque as per table below.

Series	Thread size	Tightening torque [N·m]
SYJ3000	M1.7	0.12
SYJ5000	M2.5	0.45
SYJ7000	M3	0.8

Table 7.

3.7.1 Bracket mounting

Caution

For bracket attached types of SYJ3000 (Single) and SYJ7000, do not use it without bracket.


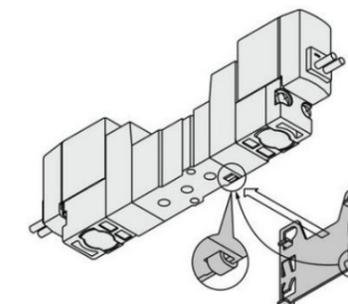


Figure 1.

- 1) Insert the lower hook of the mounting bracket into the groove on the bottom of the valve as shown.

3 Installation - continued

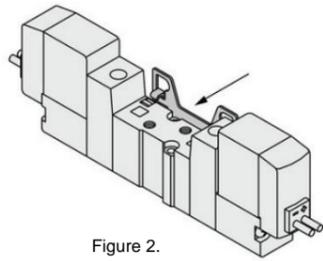

2) Press the valve and mounting bracket together until the upper hook of the bracket snaps into place in the groove on top of the valve.

Figure 2.

3.7.2 Mixed installation of 3 port and 5 port valves on same manifold

Caution

- The SYJ3000/5000/7000 series and the SYJ300/500/700 series can be mounted on the same manifold.

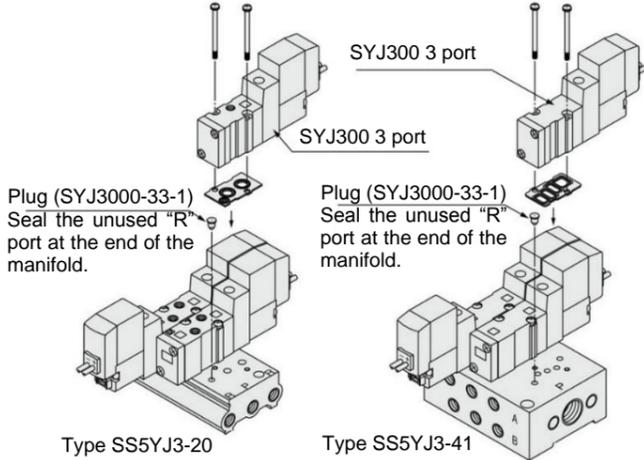


Figure 3.

- Refer to catalogue for additional details on mixed installation of SYJ300 and SYJ3000 valves.
- The use of an adapter plate makes it possible to mount the SYJ500 series on the manifold bases of SYJ5000 series, and SYJ700 series on the manifold bases of the SYJ7000 series.
- Refer to catalogue for details on mixed installation of SYJ500 and SYJ5000 valves and SYJ700 and SYJ7000 valves.

3.7.3 Blanking plate assembly, adapter plate assembly and other accessories

Refer to table 7 in 3.7 for tightening torques and refer to catalogue for installation details.

3.8 SYJ5000 with built in speed controller

- Adjust the speed controller dial with a torque of 0.3 N·m or less.
- When using SYJ5#53 model, the speed controller must be opened more than 1 complete rotation from fully closed in order to function properly.
- Do not loosen plate fixing screw.

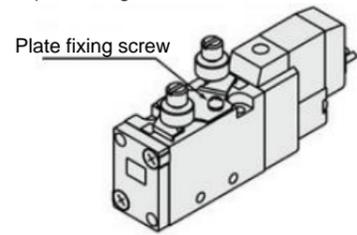


Figure 4.

3.9 Effect of back pressure when using a manifold

Warning

- Use caution when valves are used on a manifold, because an actuator may malfunction due to back-pressure.
- For a 3-position exhaust centre valve or single acting cylinder, take appropriate measures to prevent malfunction by using it with an individual EXH interface block.

3 Installation - continued

3.10 Electrical circuits

Caution

Surge suppression should be specified by using the appropriate part number. If a valve type without suppression (Type 'Nil') is used, suppression must be provided by the host controller as close as possible to the valve.

3.10.1 DC

3.10.1.1 Grommet, L/M plug connector

Standard type (with polarity)	Non-polar type
<p>Surge voltage suppressor (□S)</p>	<p>Surge voltage suppressor (□R)</p>
<p>Light / surge voltage suppressor (□Z)</p>	<p>Light / surge voltage suppressor (□U)</p>

Table 8.

3.10.1.2 With power saving circuit

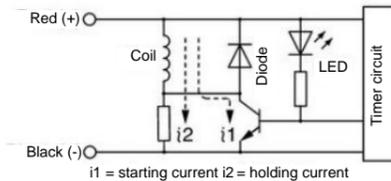


Figure 5.

- Power consumption is decreased by ¼ by reducing the wattage required to hold the valve in an energized state. (Effective energizing time is over 62 ms at 24 VDC).
- Be careful not to reverse the polarity, since a diode to prevent reversed current is not provided for the power saving circuit.

3.10.1.3 DIN terminal

Surge voltage suppressor (DS)	Light / surge voltage suppressor (DZ)

Table 9.

3.10.1.4 M8 Connector

Standard type (with polarity)	Non-polar type
<p>Surge voltage suppressor (□S)</p>	<p>Surge voltage suppressor (□R)</p>
<p>Light / surge voltage suppressor (□Z)</p>	<p>Light / surge voltage suppressor (□U)</p>

Table 10.

3 Installation - continued

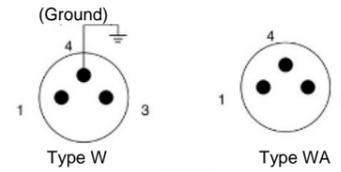


Figure 6.

- For the standard type (with polarity), connect + to 1 and - to 3 for type W, while + to 4 and - to 3 for type WA.

Caution

- Please be careful not to reverse the polarity, since a diode to prevent the reversed current is not provided for DC voltages other than 24 and 12 VDC.
- The WA-type valve cannot be grounded.

3.10.2 AC

There is no "S" type because the generation of surge voltage is prevented by a rectifier

3.10.2.1 Grommet, L/M plug connector (□Z)

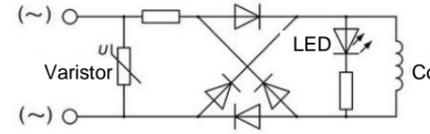


Figure 7.

3.10.2.2 DIN terminal (DZ)




Figure 8.

3.11 Solenoid valve for 200, 220 VAC specification

Valves with grommet and L/M type plug connector AC specifications have built-in rectifier circuit in the pilot section to operate the DC coil. With 200,220 VAC, this built-in rectifier generates heat when energized. The surface may become hot depending on the energized condition; therefore, do not touch the surface of these solenoid valves.

3.12 Extended periods of continuous energization

Warning

- When the product is continuously energized for a long period of time (30 minutes or longer), select the low wattage type.
- Refer to '3, 4, 5 port solenoid valves precautions' for more details.
- When solenoid valves are mounted in a control panel, employ measures to radiate excess heat, so that temperatures remain within the valve specification range. Use special caution when three or more stations sequentially aligned on the manifold are continuously energized since this will cause a drastic temperature rise.

3.13 Residual voltage

Caution

- If a Zener diode or varistor voltage suppressor is used, the suppressor arrests the back EMF voltage from the coil to a level in proportion to the rated voltage.
- Ensure the transient voltage is within the specification of the host controller.
- Contact SMC for the Zener diode or varistor residual voltage.
- In the case of a diode, the residual voltage is approximately 1 V.
- Valve response time is dependent on surge suppression method selected.

3.14 Countermeasure for surge voltage

Caution

- At times of sudden interruption of the power supply, the energy stored in a large inductive device may cause non-polar type valves in a de-energised state to switch.
- When installing a breaker circuit to isolate the power, consider a valve with polarity (with polarity protection diode), or install a surge absorption diode across the output of the breaker.

3 Installation - continued

3.15 Use as 3-port valves

- The SYJ3000/5000/7000 can be used as normally closed (N.C.) or normally open (N.O.) 3-port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open.

Refer to the catalogue for additional details.

Type of actuation	Plug position	B port		A port	
		N.C.	N.O.	N.C.	N.O.
Number of solenoids	Single				
	Double				

Note) JIS symbols above are of SY5000 series.

Table 11.

3.16 How to use plug connector

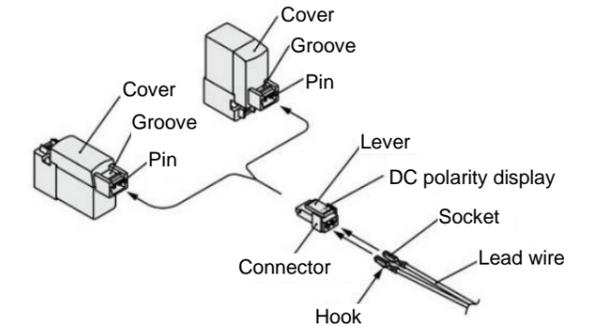


Figure 9.

3.16.1 Crimping of lead wires and sockets

Refer to the specific product precautions in the catalogue.

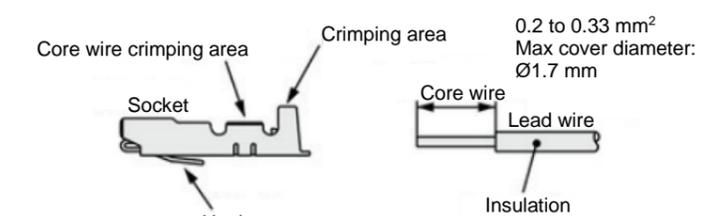


Figure 10.

3.17 Attaching and detaching sockets with lead wires

Refer to the specific product precautions in the catalogue.

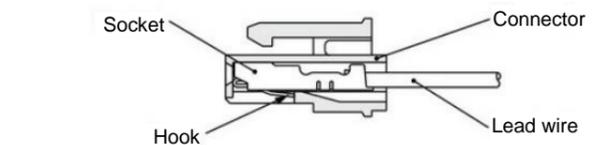


Figure 11.

3.18 How to use DIN terminal

- Refer to catalogue for additional information
- Cable O.D. Ø3.5 mm to Ø7 mm
- (Reference) 0.5mm², 2-core or 3-core, equivalent to JIS C 3306

3 Installation - continued

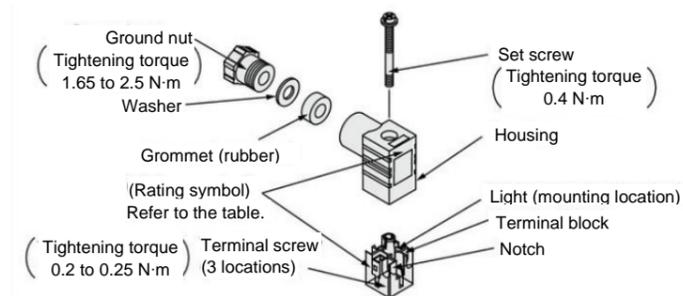


Figure 12.

3.18.1 Type "Y"

- DIN connector type Y is a DIN connector that conforms to the DIN pitch 8-mm standard.
- D type DIN connector with 9.4 mm pitch between terminals is not interchangeable.
- To distinguish from the D type DIN connector, "N" is listed at the end of voltage symbol. (For connector parts without lights, "N" is not indicated. Please refer to the name plate to distinguish.)
- Dimensions are completely the same as D type connector
- When exchanging the pilot valve assembly only, "V115-#D" is interchangeable with "V115-#Y". Do not replace V111 (G, L, M) to V115-#D/#Y (DIN terminal), and vice versa.

3.18.2 Circuit diagram with light


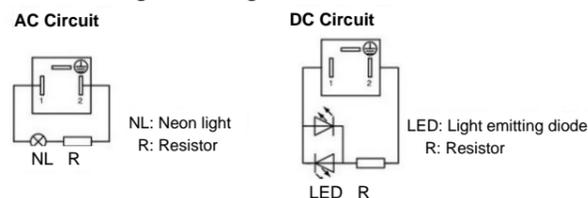


Figure 13.

3.18.3 Changing connector entry direction



Refer to the Specific Product Precautions in the catalogue.

3.19 M8 connector

Refer to catalogue for additional information.



Figure 14.

3.20 Electrical wiring specifications

Refer to catalogue for electrical wiring specifications

4 How to Order


Refer to catalogue for 'How to Order'.

5 Outline Dimensions

Refer to catalogue for outline dimensions.

6 Maintenance

6.1 General maintenance




- Not following proper maintenance procedures could cause the product to malfunction and lead to equipment damage.
- If handled improperly, compressed air can be dangerous.
- Maintenance of pneumatic systems should be performed only by qualified personnel.

6 Maintenance - continued

- Before performing maintenance, turn off the power supply and be sure to cut off the supply pressure. Confirm that the air is released to atmosphere.
- After installation and maintenance, apply operating pressure and power to the equipment and perform appropriate functional and leakage tests to make sure the equipment is installed correctly.
- If any electrical connections are disturbed during maintenance, ensure they are reconnected correctly and safety checks are carried out as required to ensure continued compliance with applicable national regulations.
- Do not make any modification to the product.
- Do not disassemble the product, unless required by installation or maintenance instructions.


6.2 Replacement parts

- Refer to catalogue for details regarding replacement parts such as, pilot valve assembly, blanking plate assembly, adapter plate assembly (for mixed installation), individual SUP/EXH spacer assembly, interface regulator, and electrical connectors.



- Pilot valves in this series are improved to provide excellent energy saving results. However, following this improvement, these new valves are no longer compatible with the current pilot valve used at the interface. Consult with SMC when you need to exchange these pilot valves, in the case of manual override (marked in orange) of the adapter plate.

New type

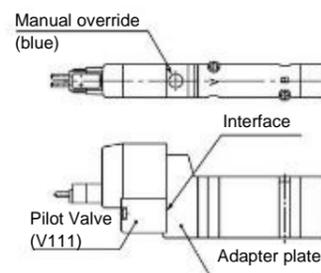

Current type


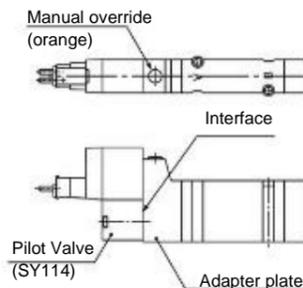


Figure 15.


7 Limitations of Use



The system designer should determine the effect of the possible failure modes of the product on the system.


7 Limitations of use - continued

7.1 Limited warranty and disclaimer/compliance requirements




Refer to Handling Precautions for SMC Products.

7.2 Low temperature operation



Unless otherwise indicated in the specifications for each valve, operation is possible to -10°C, but appropriate measures should be taken to avoid solidification or freezing of drainage and moisture, etc.

7.3 Air returned or air/spring returned spool valves



- The use of 2-position single valves with air returned or air/spring returned spools has to be carefully considered.
- The return of the valve spool into the de-energized position depends on the pilot pressure. If the pilot pressure drops below the specified operating pressure the position of the spool cannot be defined.
- The design of the system must take into account such behaviour.
- Additional measures might be necessary. For example, the installation of an additional air tank to maintain the pilot pressure. Such measures must be evaluated by risk assessment within the validation process.

Energy source status	Single	Double	3 position	Dual 3 Port
Air supply present, electricity cut	Spool returns to the off position by air force	Spool stops moving after electricity cut (Position cannot be defined)	Spool returns to off position by spring force	Spools return to off position by air force
Air supply cut before electricity cut	Spool stops moving after air pressure cut (Position cannot be defined)	Spool stops moving after air pressure cut (Position cannot be defined)	Spool returns to off position by spring force	Spool stops moving after air pressure cut (Position cannot be defined)

Table 12

7.4 Intermediate stopping




Refer to Handling Precautions for 3/4/5 port Solenoid Valves.

7.5 Holding of pressure




Since the valves are subject to air leakage, they cannot be used for applications such as holding pressure (including vacuum) in a system.

7.6 Cannot be used as an emergency shut-off valve




This product is not designed for safety applications such as an emergency shut-off valve. If the valves are used in this type of system, other reliable safety assurance measures should be adopted.

7.7 Safety relay or PLC



If a safe output from a safety relay or PLC is used to operate this valve, ensure that any output test pulse duration is shorter than 1 ms to avoid the valve solenoid responding.

7.8 Leakage voltage



Ensure that any leakage voltage caused by the leakage current when the switching element is OFF causes $\leq 3\%$ (for DC coils) or $\leq 8\%$ (for AC coils) of the rated voltage across the valve.

7.9 Momentary energization



If a double solenoid valve will be operated with momentary energization, it should be energized for at least 0.1 second. However, depending on the secondary load conditions, it should be energized until the cylinder reaches the stroke end position, as there is a possibility of malfunction otherwise.

8 Product Disposal

This product shall not be disposed of as municipal waste. Check your local regulations and guidelines to dispose this product correctly, in order to reduce the impact on human health and the environment.

9 Contacts

Refer to www.smcworld.com or www.smc.eu for your local distributor/importer.

SMC Corporation

URL: <https://www.smcworld.com> (Global) <https://www.smc.eu> (Europe)
SMC Corporation, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, Japan
Specifications are subject to change without prior notice from the manufacturer.
© 2022 SMC Corporation All Rights Reserved.
Template DKP50047-F-085M